

 
 
# ZX30 USER INSTRUCTIONS

Briefed with the idea of "The Super intelligent Design Concept" Sanji engineers developed the ZX30 Range of professional vehicle security alarm systems. The ZX30 represents the 'state of the art' in vehicle security. Read these instructions for correct system operation. All points marked \* are optional features.

## 1) SETTING THE ALARM

To enable the full alarm features.

Press the lock button on the vehicles remote, the unit will sound 2 soft chirps. The doors will lock.



## 2) DOOR / BOOT / BONNET OPEN WARNING

To warn the driver that a door or boot is open when setting the alarm.

The unit will sound two additional loud chirps and flash the indicators twice when setting the alarm. If a door is still open when the unit fully arms, the doors will be bypassed. The system will assume a faulty door switch.



## 3) ALARM DELAY PERIOD

15 second arming delay.

 
The dash led will flash rapidly during the 15 second delay period. After the delay, the dash led will start to flash slowly. The alarm is now fully armed.



## 4) SENSOR SHUT DOWN

To disable the interior sensor so that a pet or person can remain inside the vehicle when the alarm is set.


Set the alarm and wave your hand in front of the sensor. The siren will sound 4 chirps. The sensor has now been disabled. When the alarm is set the doors and ignition will armed but the sensor will be disabled. When the alarm is set again the sensor will be armed.



## 5) RESETTING THE ALARM

To reset the alarm.

 Press the unlock button on the vehicles remote. The unit will sound 1 soft chirp and the doors will unlock. The alarm has now been reset.



## 6) AUTO ZONE BYPASS

Automatically bypass a defective zone.

 
If the unit detects a permanently faulty zone, e.g. door or sensor during alarm set, the system will sound 3 times then isolate the faulty zone.



## 7) VIOLATION CHIRPS

To indicate to user that the alarm has triggered in his/her absence.


When the alarm is reset, the unit will sound 4 loud chirps if the alarm had triggered during the alarm set mode.

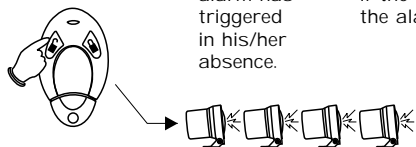

## 8) DOOR LOCK ON START

Automatic locking of all doors when ignition is turned on.

 When the ignition is turned on, if all the doors, boot and bonnet are closed, the doors will lock.




## 9) ONE EVENT OVERRIDE

To override the alarm, in the event of a flat remote battery.



## 10) PERMANENT SERVICE MODE

 To disable the alarm permanently.



Open the door, the alarm will start to sound the siren. Turn the Ignition on unit chirps once, the system will be reset. This is a once off override.

In drive, (ignition on), press the hidden override button for +- 5seconds, the siren will chirp 4 times. Permanent override has been activated. The dash led will be on. All alarm, immobilizer and hi-jack features will be disabled. When the ignition is turned on the unit will flash the indicators rapidly for 4 seconds to warn the user that the unit is in service mode. To exit service mode, turn the ignition on and press the hidden override button for +- 5seconds, the siren will chirp twice. The permanent override for the alarm will be deactivated. The dash led will be off. The system will be fully functional again.

## 11) FORCED HI-JACK MODE

Forced hi-jack in drive.



When you start the vehicle, the unit will enter hi-jack, the dash led will give a 1 second pulse. Refer to point 15 to reset hi-jack. If you start the vehicle with the hidden button pressed, the unit will not enter forced hi-jack.

## 12) DRIVER'S DOOR HI-JACK

 
To activate hi-jack.



In drive open then close driver's door. If all doors, bonnet and boot are closed the dash led will give a 1 second pulse. The unit has entered hi-jack phase.

## 13) HI-JACK OPERATION

Hi-jack mode.

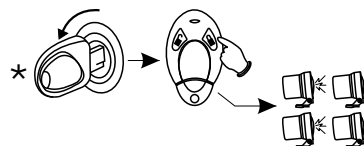

Countdown period is 90 sec. If ignition is turned off during this time, the timer will stop. When the ignition is turned on again the timer will continue. If you try to set or reset the alarm during the countdown period, the unit will sound 4 loud chirps to warn you that you are in hi-jack mode.

## 14) HI-JACK WARNING PERIOD

Hi-jack warning mode.



After the countdown period the unit will enter the 20 second warning period. The unit will chirp and flash the indicators. After this period the unit will enter the 8 second slow down period. At any point in time you can reset hi-jack by pressing the hidden button.

## 15) RESETTING HI-JACK

To reset the unit back to normal drive mode.



Press the hidden push button at any time for +/- 2 seconds, the unit will chirp once to confirm that hi-jack has been reset.

## 16) FINAL HI-JACK

To confirm what phase the unit is in.



In final hi-jack the siren will sound on and off at 5 second intervals and the indicators will flash. The immobiliser will be armed. The unit can be reset by pushing the hidden button for +/- 3 seconds.