


# USER INSTRUCTIONS

## ZX40-KP KEYPAD IMMOBILIZER


Briefed with the idea of "The Super intelligent Design Concept" Sanji engineers have developed the ZX40-KP professional anti key theft vehicle security immobilizer system. The ZX40-KP represents the ~~state~~ state of the art' in vehicle security. All points marked ~~\*~~ are optional features.

Note : The system comes default from the factory with code 1111. Refer to point 6 on how to change the code.


- 1) IMMOBILIZER ARMED Immobilizer armed mode. The keypad led will flash, the vehicle is immobilized. The unit can not be driven.

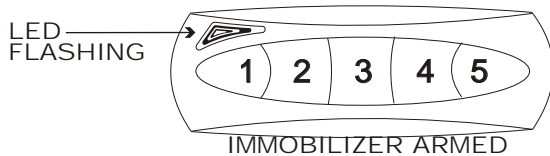


- 2) RESETTING THE IMMOBILIZER To reset the immobilizer. Enter your 4 digit code to reset the immobilizer, the keypad led will turn off, the vehicle can now be driven. If entered incorrectly, the unit will sound rapid beeps, the immobilizer will not reset.

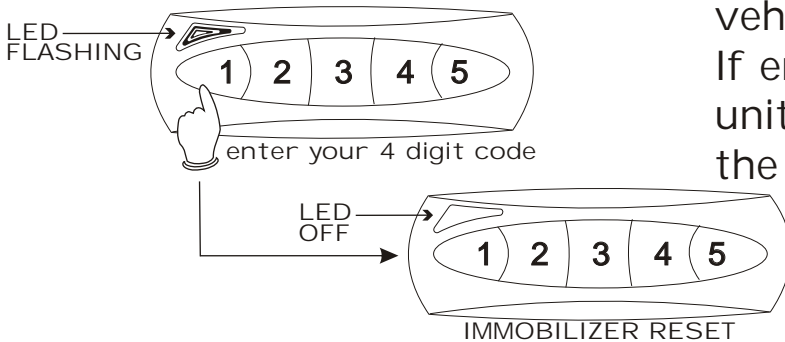

- 3) LOCK UP MODE 10 minute lock up. If an incorrect code is entered more than 4 times, the unit will lock up for 10 minutes. The led will flash and the unit will beep. The siren will sound.

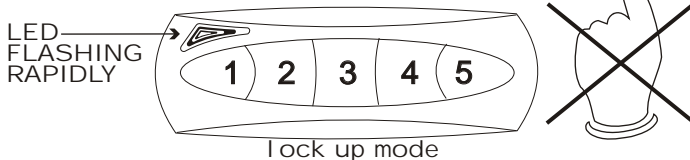


- 4) DRIVE MODE Drive mode. Once the immobilizer has been reset the vehicle can be driven. If the ignition is off for 60 seconds, the immobilizer will arm up automatically.

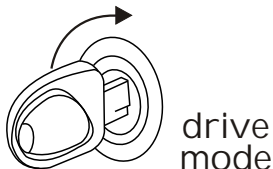

### 5) NUMBER LIGHTING


Numbers light up.

When the driver's door is opened the numbers will light up for easy operation at night. The numbers will also turn on when any button is pressed. The numbers will turn off automatically.

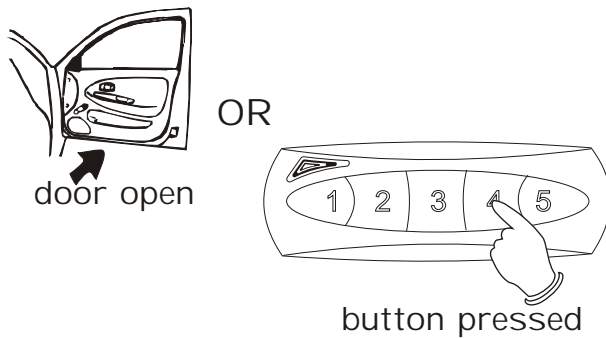


### 6) CHANGING YOUR 4 DIGIT CODE


The unit will come default from the factory with code 1111 loaded into the keypad. Follow the details below on how to change the code. Note : you can not enter change code mode while in service mode.

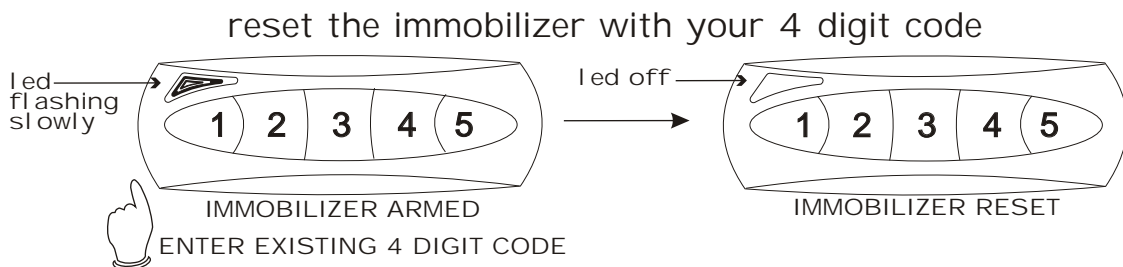

then, press and hold button 5 until the keypad sounds a loud beep and the led turns on solid.

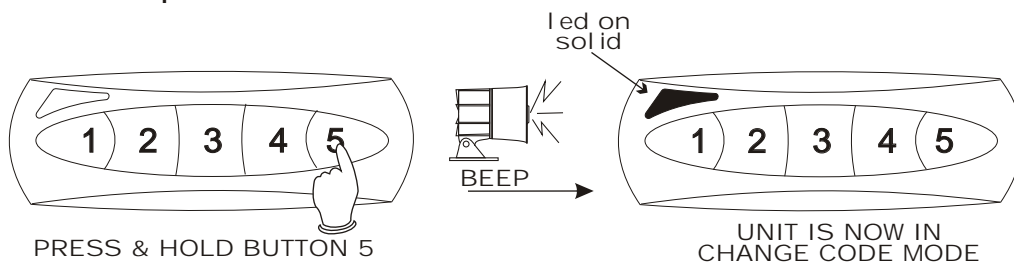


Now enter your new 4 digit code, after the code is entered the keypad will sound a loud beep.

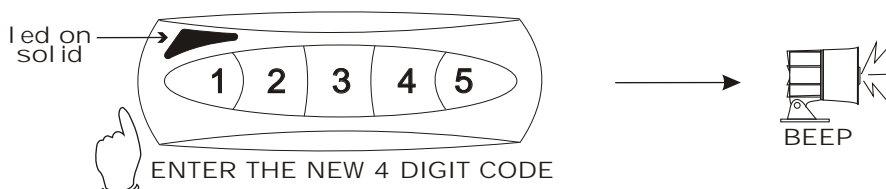


## 6) CHANGING YOUR 4 DIGIT CODE - continued

Now enter your new 4 digit code again, to verify the new code. After the code is entered correctly the keypad will sound a loud beep, the keypad led will start to flash. The new 4 digit code has now been saved.

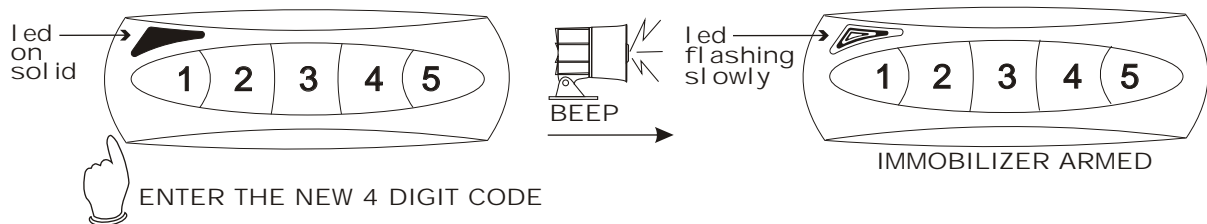

If the first new code does not match the second code, then the keypad will sound a rapid beep to warn you that the codes did not match. the new code will not be saved, the unit will exit change code mode.

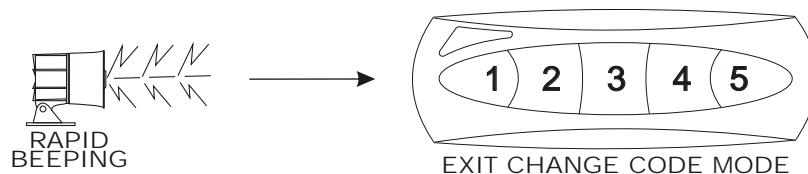

The new code has not been saved.


### IMPORTANT NOTE !

IF NO NEW CODE IS ENTERED WITHIN IN 2 MINUTES OR THE IGNITION IS TURNED ON, THE UNIT WILL AUTOMATICALLY EXIT CHANGE CODE MODE.

## 7) SERVICE MODE OPERATION


### TO ENTER SERVICE MODE

reset the immobilizer with your 4 digit code

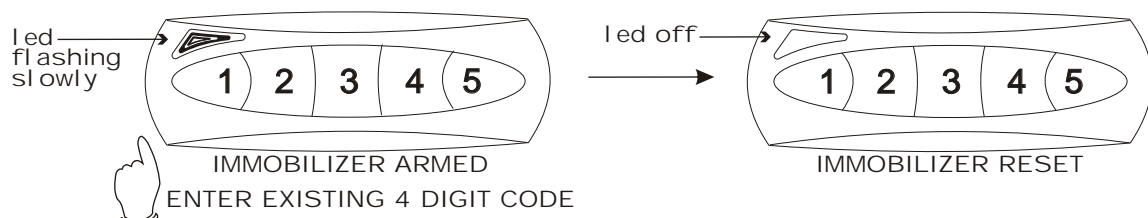

## 7) SERVICE MODE OPERATION - continued

then, press and hold button 1 until the keypad sounds 2 loud beeps and the led turns on solid.

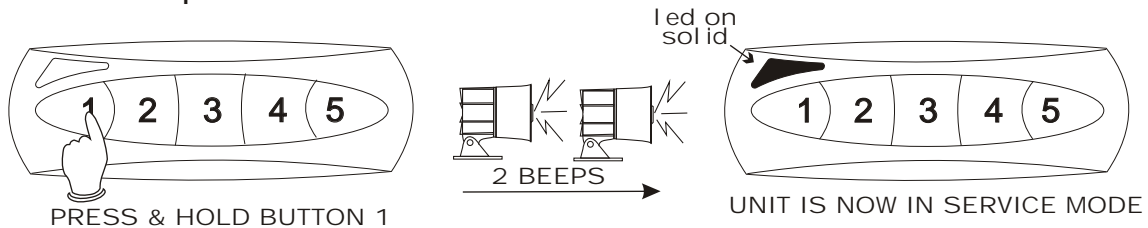

## OPERATION IN SERVICE MODE


The keypad led will be on solid, the immobilizer will not arm up during this mode. The vehicle can be driven at any time.

### Auto Exit Service Mode :

If the ignition is on (drive mode) for more than 15 minutes, when the ignition is turned off the unit will automatically exit service mode. If the ignition is turned off before the 15 minute time is up, the 15 minute timer will reset.

## TO EXIT SERVICE MODE

Enter your 4 digit code then press and hold button 1 until the keypad sounds a loud beep and the led turns off. The unit has now exited service mode.

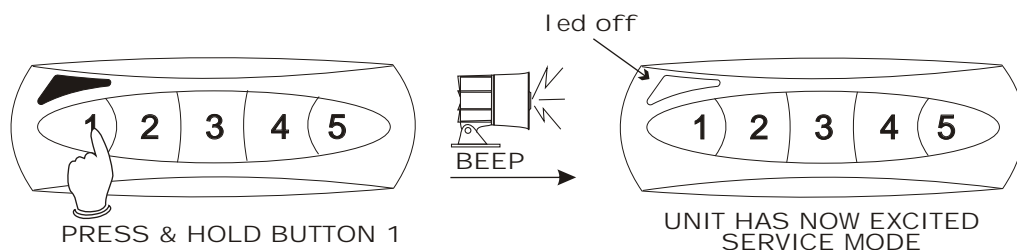


## 8) HI-JACK FEATURES

The unit will come default from the factory with the hi-jack features deactivated (off).

There are 2 hi-jack features available on the ZX40-KP :

1. Driver's door hi-jack, or
2. Driver's door and Forced hi-jack.


## 8) HI-JACK FEATURES - continued

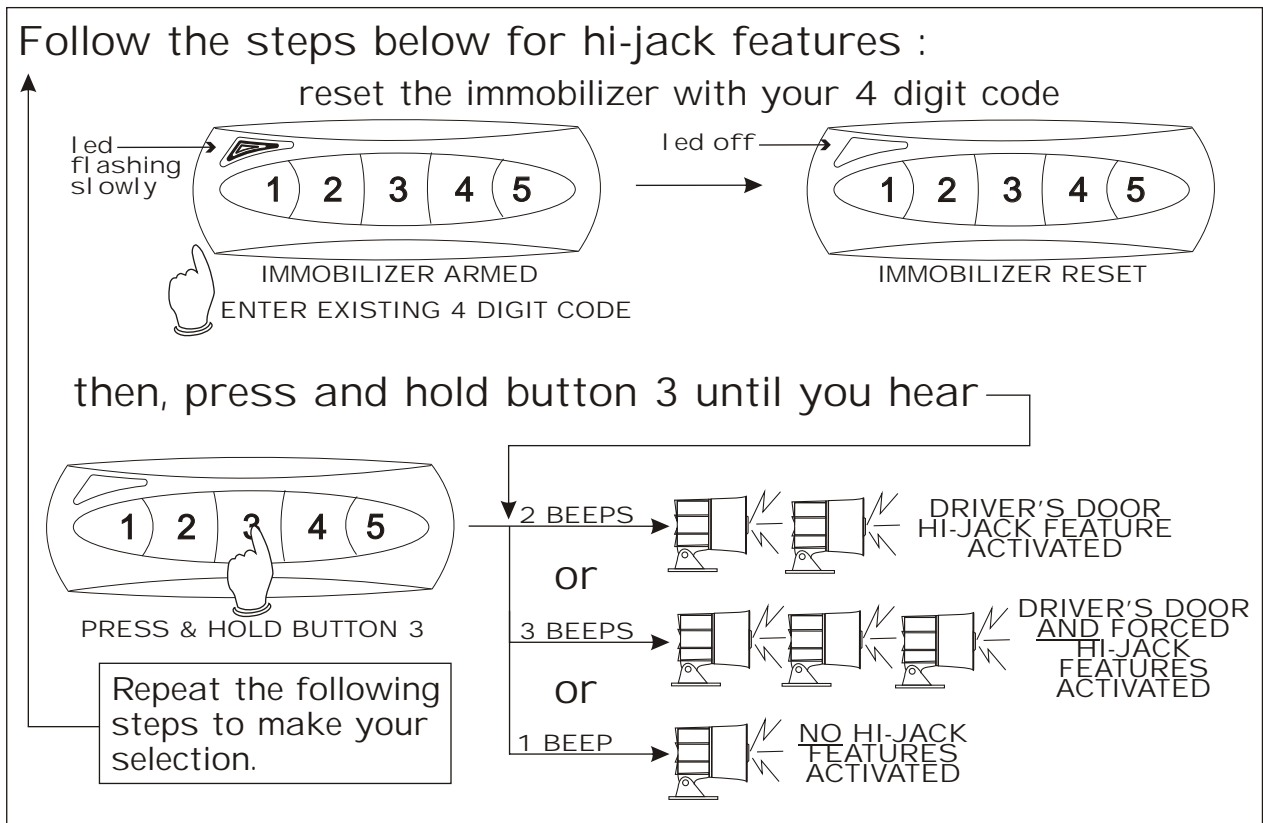

## HI-JACK OPERATION

### 9) FORCED HI-JACK

\*

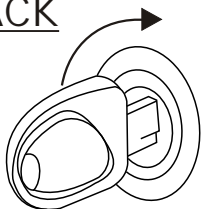


Forced hi-jack When you start the vehicle, in drive. the keypad led will give a 1 second flash and will enter hi-jack.

Ignition turned on

### 10) DRIVER'S DOOR HI-JACK

\*

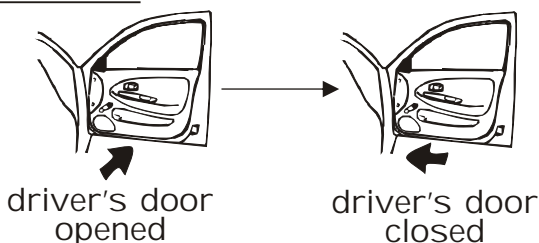

To activate door hi-jack.


In drive open then close driver's door, the keypad led will give a 1 second flash and will enter hi-jack.

11) HI-JACK OPERATION

Hi-jack delay mode.

Countdown period is 1min 45seconds, if ignition is turned off, the timer will stop. When the ignition is turned on again the timer will continue. Refer to point 14 to reset hi-jack.

\*

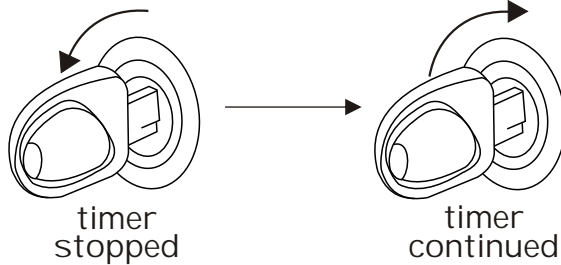


12) HI-JACK WARNING PERIOD

Hi-jack warning mode.

After the countdown period the unit will enter the 50 second warning period. The keypad will beep and flash the led. Refer to point 15 to reset hi-jack.

\*

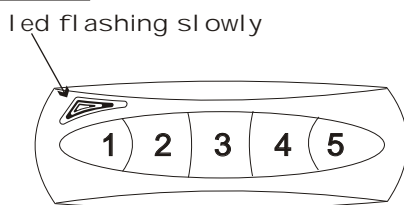

13) FINAL HI-JACK

Final hi-jack vehicle immobilized.

In final hi-jack the keypad will beep and the led will be on solid, the siren will chirp. The immobilizer will be armed. Refer to point 15 to reset hi-jack.

\*



14) RESETTING HI-JACK IN DELAY MODE

To reset the unit back to normal operation, in hi-jack delay.

Enter your 4 digit code to reset hi-jack, if entered correctly the unit will sound a loud beep and reset hi-jack.

\*



15) RESETTING HI-JACK IN WARNING OR FINAL

To reset the unit back to normal operation, in warning or final hi-jack.

Press any button on the keypad to stop the unit from beeping (silent mode). You then have 6 seconds to enter your 4 digit code to reset hi-jack before the beeping starts again.

\*

