 



# ZX7OCL USER INSTRUCTIONS

Briefed with the idea of "The Super intelligent Design Concept" Sanji engineers developed the ZX Range of professional vehicle security alarm systems. The ZX range represents the 'state of the art' in vehicle security. Read these instructions for correct system operation. All points marked \* are optional features.


## 1) SETTING THE ALARM

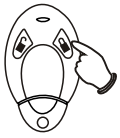

 
Press the lock button, the unit will sound 2 soft chirps and the indicators will flash twice. If fitted with central locking the doors will lock and the sensor will switch on.




## 2) DOOR / BOOT / BONNET OPEN WARNING

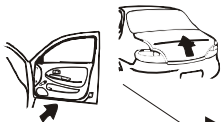 

 The unit will sound two additional loud chirps and flash the indicators twice when setting the alarm. If a door is still open when the unit fully arms, the doors will be bypassed. The system will assume a faulty door switch.



## 3) ALARM DELAY PERIOD

 


The sensor led will flash rapidly during the 20 second delay period. After the delay, the sensor led will go on solid. The alarm is now fully armed.

## 4) ALARM FAST ARM



 After the alarm has been set press the lock button again. The unit will now go to fully armed and the sensor led will turn on solid.

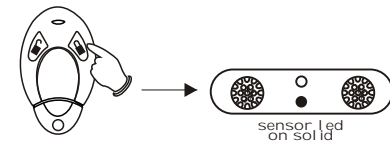


## 5) ALARM ARMED CONFIRMATION




Press the lock button, the indicators will flash once to confirm that the alarm is fully set.


 
## 6) SENSOR SHUT DOWN

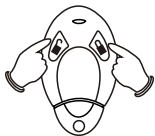

 Press both buttons together when setting the alarm. The siren will sound 4 chirps and the indicators will flash twice. The sensor has now been disabled. After 20 seconds the system will be fully armed, however the sensor will be disabled.



## 7) RESETTING THE ALARM



Press the unlock button. The unit will sound 1 soft chirp and the indicators will flash once. If fitted with central locking the doors will unlock.



## 8) SELECTIVE UNLOCK ON ALARM RESET

\*



 
Press the unlock button. The unit will reset and selectively only open the driver's door. To open the passenger doors press the unlock button again.

## 9) AUTO ZONE BYPASS



If the unit detects a permanently faulty zone, e.g. door or sensor during alarm set, the system will sound 3 times then isolate the faulty zone.

## 10) VIOLATION CHIRPS

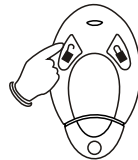


When the alarm is reset, the unit will sound 4 loud chirps if the alarm had triggered during the alarm set mode.




## 11) DOOR LOCK ON START

 \*




When the ignition is turned on, if all the doors, boot and bonnet are closed, the doors will lock.

## 12) DOOR LOCK / UNLOCK IN DRIVE

 


 Press the unlock button to unlock the doors. Press the lock button to lock the doors.



## 13) DOOR UNLOCK ON IGNITION OFF

 \*



Switch the ignition off. All the doors will unlock. If fitted with selective unlock, only the driver's door will open. Press the unlock button to open the passenger doors.

## 14) REMOTE LOW BATTERY WARNING

The remote led will normally be on solid when pressing any button. If the remote batteries are low the led on your remote control will flash. Replace the batteries with: 2 x CR1220 lithium batteries.