

THE AT100 REPRESENTS A MILESTONE IN AFFORDABLE VEHICLE SECURITY DESIGN. SANJI HAVE INCORPORATED THE MOST UP TO DATE TECHNOLOGY TO IMPROVE PERFORMANCE AND LONG TERM RELIABILITY. READ THESE INSTRUCTIONS FOR CORRECT SYSTEM OPERATION. ALL POINTS MARKED * ARE OPTIONAL FEATURES.

1) SETTING THE ALARM



TO ENABLE THE IMMOBILISER AND FULL ALARM FEATURES

PRESS THE DOUBLE DOT BUTTON AND THE UNIT WILL SOUND 2 SOFT CHIRPS AND THE INDICATORS WILL FLASH TWICE. IF FITTED WITH CENTRAL LOCKING THE DOORS WILL LOCK. THE SENSOR WILL SWITCH ON.

2) MASTER SLAVE REMOTES



TO ENSURE THE USER USES THE SLAVE REMOTE FOR DAILY USE.

ON SETTING THE ALARM THE MASTER REMOTE WILL SOUND 3 CHIRPS VS 2 CHIRPS ON THE SLAVE REMOTE. TEST AND USE THE 2 CHIRP REMOTE FOR DAILY USE.

3) DOOR / BOOT OPEN WARNING



TO WARN THE DRIVER IF A DOOR OR BOOT IS OPEN WHEN SETTING THE ALARM.

THE UNIT WILL SOUND TWO ADDITIONAL LOUD CHIRPS WHEN SETTING THE ALARM.

4) ALARM DELAY PERIOD



30 SECOND ARMING DELAY PERIOD.

THE DASH LED WILL FLASH RAPIDLY DURING THE 30 SECOND DELAY PERIOD. AFTER THE DELAY THE DASH LED FLASH WILL SLOW DOWN. NOW THE ALARM AND IMMOBILISER ARE FULLY SET.


5) ALARM FAST ARM



TO SKIP THE 30 SECOND ARM DELAY.

AFTER THE ALARM HAS BEEN SET PRESS THE DOUBLE DOT BUTTON AGAIN. THE UNIT WILL NOW GO TO FULLY ARMED AND THE DASH LED WILL FLASH SLOWLY.

6) SENSOR SHUT DOWN

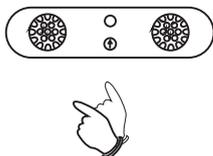

TO DISABLE THE INTERIOR SENSOR SO THAT A PET OR PERSON CAN REMAIN INSIDE THE VEHICLE WHEN THE ALARM IS ARMED.

SET THE ALARM. DURING THE ALARM DELAY PERIOD WAVE YOUR HAND IN FRONT OF THE SONIC SENSOR. THE LED ON THE SENSOR WILL FLASH. AFTER THE 30 SECOND DELAY PERIOD THE SENSOR LED WILL GO OUT AND THE ALARM WILL BE FULLY ARMED.

14) DOOR UNLOCK ON IGNITION OFF

TO OPEN ALL DOORS WHEN THE IGNITION IS TURNED OFF.


SWITCH THE IGNITION OFF. ALL THE DOORS WILL UNLOCK .



15) OVERRIDING THE ALARM AND IMMOBILISER

TO RESET THE ALARM OR IMMOBILISER IN THE EVENT OF A FLAT REMOTE BATTERY.


PRESS THE HIDDEN BUTTON FOR 3 SECONDS. THE DASH LED WILL EXTINGUISH AND THE UNIT WILL RESET.

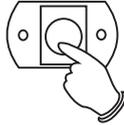

16) REMOTE PANIC

TO ENABLE THE SIREN TO SOUND AND THE INDICATORS TO FLASH UNDER EMERGENCY CONDITIONS.


PRESS EITHER BUTTON CONTINUOUSLY FOR 3 SECONDS. ONCE IN PANIC, IT WILL AUTOMATICALLY UNLOCK THE DOORS (IF CONNECTED) AND RESET THE UNIT FOR DRIVE.

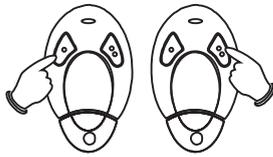

17) REMOTE PANIC IN DRIVE

TO ENABLE THE SIREN TO SOUND AND THE INDICATORS TO FLASH UNDER EMERGENCY CONDITIONS WHILE DRIVING.

ONCE IN DRIVE, PRESS EITHER BUTTON CONTINUOUSLY FOR 3 SECONDS. THE SIREN WILL SOUND AND THE INDICATORS WILL FLASH.

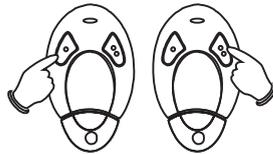

18) RESETTING PANIC MODE

TO RESET THE UNIT BACK TO NORMAL OPERATION.


PRESS THE SINGLE DOT BUTTON AND THE UNIT WILL RESET PANIC AND RETURN TO NORMAL OPERATION.



19) SELECTIVE UNLOCK ON ALARM RESET

TO RESET THE ALARM AND OPEN THE DRIVERS DOOR ONLY.


PRESS THE SINGLE DOT BUTTON AND THE UNIT WILL RESET AND SELECTIVELY ONLY OPEN THE DRIVERS DOOR. TO OPEN OTHER PASSENGER DOORS PRESS THE SINGLE DOT BUTTON AGAIN.

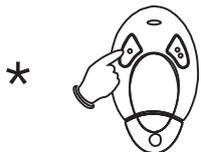

20) SELECTIVE UNLOCK ON IGNITION OFF

TO SELECTIVELY OPEN THE DRIVERS DOOR ONLY WHEN THE IGNITION IS TURNED OFF.

SWITCH THE IGNITION OFF. THE DRIVERS DOOR WILL OPEN AND ALL OTHER DOORS WILL REMAIN LOCKED. TO OPEN THE OTHER DOORS PRESS THE SINGLE DOT ON THE REMOTE.

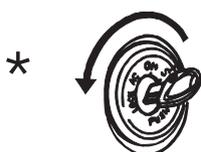

21) REMOTE BATTERIES

BATTERY REPLACEMENT


THE NORMAL LIFE OF THE LITHIUM BATTERY'S ARE 3 TO 5 YEARS. IN THE EVENT OF THE REMOTE LED NOT LIGHTING WHEN ACTIVATED , REPLACE THE BATTERIES. REPLACEMENT BATTERIES - 2 X CR1220



22) SETTING SERVICE MODE

TO TEMPORARILY DISABLE ALL ALARM, IMMOBILISER AND OPTIONAL FEATURES FOR VEHICLE SERVICE.

IN DRIVE, PRESS THE HIDDEN BUTTON FOR 10 SECONDS. THE SIREN WILL CHIRP AND THE UNIT WILL ENTER SERVICE MODE.

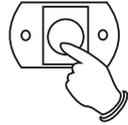

23) OPERATION IN SERVICE MODE

TO SHOW THE USER THAT THE UNIT IS IN SERVICE MODE.

IF AN ATTEMPT IS MADE TO SET THE ALARM THE SIREN WILL SOUND 6 CHIRPS.



24) RESETTING SERVICE MODE

TO ENABLE NORMAL OPERATION OF ALARM AND IMMOBILSER FEATURES.

IN DRIVE, PRESS THE HIDDEN BUTTON FOR 5 SECONDS THE UNIT WILL RESET AND THE SIREN WILL CHIRP THEN RESUME NORMAL OPERATION.



25) ACTIVATING HI JACK MODE

TO ACTIVATE ANTI HI JACK

IN DRIVE OPEN THEN CLOSE DRIVERS DOOR. IF ALL DOORS ,BONNET AND BOOT ARE CLOSED THE DASH LED WILL GIVE A 1 SECOND PULSE. THE UNIT IS NOW IN COUNTDOWN PHASE.

*




26) RESETTING THE HI JACK DURING THE COUNT DOWN PHASE

TO RESET THE UNIT BACK TO NORMAL DRIVE MODE.

PRESS THE HIDDEN PUSH BUTTON AT ANY TIME FOR 3 SECONDS AND THE UNIT WILL EXIT HI JACK MODE AND RESUME NORMAL OPERATION.

*

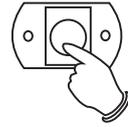

27) HI JACK FINAL PHASE

TO CONFIRM WHAT PHASE THE UNIT IS IN.

IN FINAL HI JACK THE SIREN WILL SOUND ON AND OFF IN 5 SECOND INTERVALS. THE IMMOBILISER WILL BE ACTIVE. THE UNIT CAN BE RESET BY PUSHING THE HIDDEN BUTTON FOR 3 SECONDS.

*

