

7) RESETTING THE ALARM



TO RESET THE IMMOBILISER AND FULL ALARM FEATURES.

PRESS THE SINGLE DOT BUTTON AND THE UNIT WILL SOUND 1 SOFT CHIRP AND THE INDICATORS WILL FLASH ONCE. IF FITTED WITH CENTRAL LOCKING THE DOORS WILL UNLOCK.




8) AUTO ZONE BYPASS



AUTO BYPASS OF A DEFECTIVE ZONE.

IF THE UNIT DETECTS A PERMANENTLY FAULTY ZONE WHEN IN ALARM ARMED MODE, IT WILL SOUND 3 TIMES THEN ISOLATE THE FAULTY ZONE.

9) VIOLATION CHIRPS

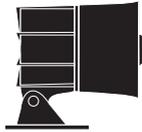

TO INDICATE TO USER THAT THE ALARM HAS TRIGGERED IN HIS ABSENCE.

ON ALARM RESET THE UNIT WILL SOUND 4 LOUD CHIRPS IF THERE WAS A ZONE TRIGGER DURING ALARM FULLY SET.



10) STARTING THE VEHICLE



TO START THE VEHICLE AFTER THE ALARM HAS BEEN RESET.

AFTER ALARM RESET THE DASH LED WILL EXTINGUISH AND THE VEHICLE CAN BE STARTED WITHIN 60 SECONDS.

11) STARTING AFTER IMMOBILISER SET



TO DEACTIVATE THE IMMOBILISER.

IF THE DASH LED IS ON SOLID, PRESS THE SINGLE DOT BUTTON THE LED WILL EXTINGUISH. INSERT THE KEY AND START THE VEHICLE.

12) DOOR LOCK ON START


*



AUTOMATIC LOCKING OF ALL DOORS WHEN IGNITION TURNED ON.

ONCE THE IGNITION IS TURNED ON THE DOORS WILL AUTOMATICALLY LOCK AFTER A 1 SECOND DELAY PERIOD.

13) DOOR LOCK / UNLOCK IN DRIVE

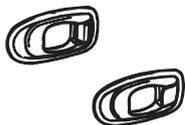

TO LOCK OR UNLOCK THE DOORS FROM THE REMOTE WHILE THE CAR IS RUNNING.

PRESS THE SINGLE DOT BUTTON TO UNLOCK THE DOORS. PRESS THE DOUBLE DOT BUTTON TO LOCK THE DOORS.

14) DOOR UNLOCK ON IGNITION OFF

TO OPEN ALL DOORS WHEN THE IGNITION IS TURNED OFF.

SWITCH THE IGNITION OFF. ALL THE DOORS WILL UNLOCK .



15) OVERRIDING THE ALARM AND IMMOBILISER

TO RESET THE ALARM OR IMMOBILISER IN THE EVENT OF A FLAT REMOTE BATTERY.

REFER TO PIN CODE OVERRIDE PROCEDURE.

16) REMOTE PANIC

TO ENABLE THE SIREN TO SOUND AND THE INDICATORS TO FLASH UNDER EMERGENCY CONDITIONS.


PRESS EITHER BUTTON CONTINUOUSLY FOR 3 SECONDS. ONCE IN PANIC, IT WILL AUTOMATICALLY UNLOCK THE DOORS (IF CONNECTED) AND RESET THE UNIT FOR DRIVE.



17) REMOTE PANIC IN DRIVE

TO ENABLE THE SIREN TO SOUND AND THE INDICATORS TO FLASH UNDER EMERGENCY CONDITIONS WHILE DRIVING.

ONCE IN DRIVE, PRESS EITHER BUTTON CONTINUOUSLY FOR 3 SECONDS. THE SIREN WILL SOUND AND THE INDICATORS WILL FLASH.

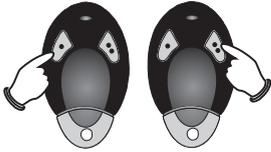

18) RESETTING PANIC MODE

TO RESET THE UNIT BACK TO NORMAL OPERATION.


PRESS THE SINGLE DOT BUTTON AND THE UNIT WILL RESET PANIC AND RETURN TO NORMAL OPERATION.



19) SELECTIVE UNLOCK ON ALARM RESET

TO RESET THE ALARM AND OPEN THE DRIVERS DOOR ONLY.


PRESS THE SINGLE DOT BUTTON, THE UNIT WILL RESET AND SELECTIVELY ONLY OPEN THE DRIVERS DOOR. TO OPEN THE PASSENGER DOORS PRESS THE SINGLE DOT BUTTON AGAIN.

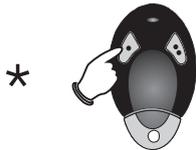

20) SELECTIVE UNLOCK ON IGNITION OFF

TO SELECTIVELY OPEN THE DRIVERS DOOR ONLY WHEN THE IGNITION IS TURNED OFF.

SWITCH THE IGNITION OFF. ONLY THE DRIVERS DOOR WILL OPEN. TO OPEN THE OTHER DOORS PRESS THE SINGLE DOT ON THE REMOTE.

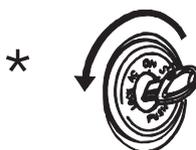

21) REMOTE BATTERIES

BATTERY REPLACEMENT.

THE NORMAL LIFE OF THE LITHIUM BATTERY'S ARE 3 TO 5 YEARS. IN THE EVENT OF THE REMOTE LED NOT LIGHTING WHEN ACTIVATED, REPLACE THE BATTERIES.
REPLACEMENT BATTERIES - 2 X CR1220



22) HI JACK SERVICE MODE

TO TEMPORARILY DISABLE ANTI HI JACK FEATURES FOR VEHICLE SERVICE.

IN DRIVE, PRESS THE HIDDEN BUTTON FOR 5 SECONDS. THE SIREN WILL CHIRP AND THE UNIT WILL ENTER SERVICE MODE.



23) OPERATION IN HI JACK SERVICE MODE

TO SHOW THE USER THAT THE UNIT IS IN SERVICE MODE.

AS A REMINDER TO THE DRIVER THE UNIT WILL SOUND A CHIRP EVERY TIME THE VEHICLE IS STARTED IF IT IS IN HI JACK SERVICE MODE.



24) RESETTING HI JACK SERVICE MODE

TO ENABLE NORMAL OPERATION OF ANTI HI JACK FUNCTION.

IN DRIVE, PRESS THE HIDDEN BUTTON FOR 5 SECONDS THE UNIT WILL RESET AND THE SIREN WILL CHIRP TWICE THEN RESUME NORMAL OPERATION.



25) ACTIVATING HI JACK MODE

TO ACTIVATE ANTI HI JACK

IN DRIVE OPEN THEN CLOSE DRIVERS DOOR. IF ALL DOORS ,BONNET AND BOOT ARE CLOSED THE DASH LED WILL GIVE A 1 SECOND PULSE. THE UNIT IS NOW IN COUNTDOWN PHASE.



26) RESETTING THE HI JACK DURING THE COUNT DOWN PHASE

TO RESET THE UNIT BACK TO NORMAL DRIVE MODE.

PRESS THE HIDDEN PUSH BUTTON AT ANY TIME FOR 2 SECONDS, THE UNIT WILL EXIT HI JACK MODE AND RESUME NORMAL OPERATION.



27) HI JACK FINAL PHASE

TO CONFIRM WHAT PHASE THE UNIT IS IN.

IN FINAL HI JACK THE SIREN WILL SOUND ON AND OFF AT 5 SECOND INTERVALS. THE IMMOBILISER WILL BE ACTIVE. THE UNIT CAN BE RESET BY PUSHING THE HIDDEN BUTTON FOR 3 SECONDS.

