 


THE AT 70 IS A NEW GENERATION ALARM AND COMFORT CONTROL SYSTEM, DESIGNED TO ENHANCE THE SECURITY OF FACTORY FITTED TRANSPONDER IMMOBILISER SYSTEMS. SANJI HAVE INCORPORATED THE MOST UP TO DATE TECHNOLOGY TO IMPROVE PERFORMANCE AND LONG TERM RELIABILITY. READ THESE INSTRUCTIONS FOR CORRECT SYSTEM OPERATION. ALL POINTS MARKED * ARE OPTIONAL FEATURES. CONSULT YOUR DEALER.

1) SETTING THE ALARM

TO ENABLE FULL ALARM FEATURES.

 

PRESS THE REMOTE BUTTON AND THE UNIT WILL SOUND 2 SOFT CHIRPS AND THE INDICATORS WILL FLASH TWICE. IF FITTED WITH CENTRAL LOCKING THE DOORS WILL LOCK. THE SENSOR WILL SWITCH ON.



2) DOOR / BOOT OPEN WARNING

TO WARN THE DRIVER IF A DOOR OR BOOT IS OPEN WHEN SETTING THE ALARM.


THE UNIT WILL SOUND TWO ADDITIONAL LOUD CHIRPS WHEN SETTING THE ALARM.

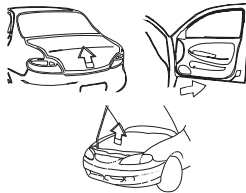

3) ALARM DELAY PERIOD

30 SECOND ARMING DELAY PERIOD.



THE SENSOR LED WILL FLASH RAPIDLY DURING THE 30 SECOND DELAY PERIOD. AFTER THE DELAY THE SENSOR LED WILL GO ON SOLID. NOW THE ALARM IS FULLY SET.

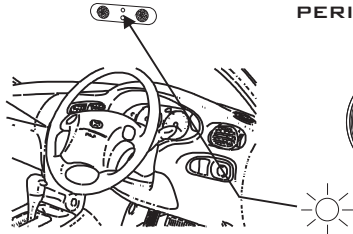

4) SENSOR SHUT DOWN

TO DISABLE THE INTERIOR SENSOR SO THAT A PET OR PERSON CAN REMAIN INSIDE THE VEHICLE WHEN THE ALARM IS ARMED.

 
PRESS THE REMOTE TO SET THE ALARM, AND WITHIN 1 SECOND PRESS THE REMOTE AGAIN. THE UNIT WILL SOUND 2 NORMAL CHIRPS FOLLOWED BY 3 LOUD CHIRPS.

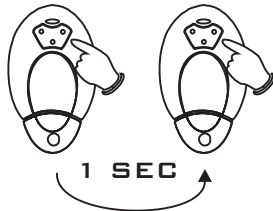


5) SENSOR SHUT DOWN CONTINUED

TO CONFIRM SENSOR SHUTDOWN MODE.

AFTER THE ALARM DELAY PERIOD THE SENSOR LED WILL FLASH SLOWLY AS A CONFIRMATION THAT THE SENSOR IS SHUT DOWN. WHEN YOU RESET THE ALARM THIS FUNCTION WILL BE AUTOMATICALLY CANCELLED.

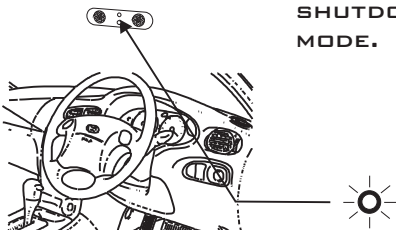

6) ALARM FULLY SET

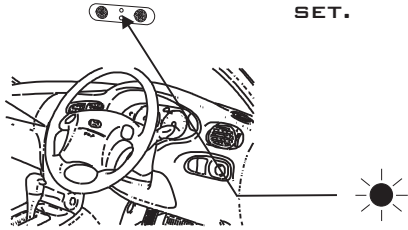

CONFIRMATION OF ALARM FULLY SET.

THE SENSOR LED WILL LIGHT SOLID. THE ALARM IS FULLY SET AND WILL SOUND FOR 30 SECONDS IF A ZONE IS TRIGGERED.

7) AUTO ZONE BYPASS



 
TO AUTOMATICALLY BYPASS A DEFECTIVE ZONE.

IF THE UNIT DETECTS A PERMANENTLY FAULTY ZONE IT WILL SOUND 3 TIMES THEN ISOLATE THE FAULTY ZONE.

8) RESETTING THE ALARM




TO RESET FULL ALARM FEATURES.




PRESS THE REMOTE BUTTON AND THE UNIT WILL SOUND 1 SOFT CHIRP AND THE INDICATORS WILL FLASH ONCE. IF FITTED WITH CENTRAL LOCKING THE DOORS WILL UNLOCK.

9) VIOLATION CHIRPS

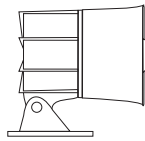

TO INDICATE TO USER THAT THE ALARM HAS TRIGGERED IN HIS ABSENCE.

 ON ALARM RESET THE UNIT WILL SOUND 4 LOUD CHIRPS IF THERE WAS A ZONE TRIGGER DURING ALARM FULLY SET.



10) OVERRIDING THE ALARM



TO RESET THE ALARM IN THE EVENT OF A FLAT REMOTE BATTERY.

IN ALARM SET MODE, OPEN THE DOOR, SIREN WILL SOUND. TURN IGNITION ON, ALARM WILL CYCLE 3 TIMES (+/- 1,5 MINUTES). SYSTEM WILL THEN BE RESET.

11) DOOR LOCK ON START

*



AUTOMATIC LOCKING OF ALL DOORS WHEN IGNITION TURNED ON.

ONCE THE IGNITION IS TURNED ON THE DOORS WILL AUTOMATICALLY LOCK AFTER A 2 SECOND DELAY PERIOD.

12) DOOR UNLOCK ON IGNITION OFF


*



AUTOMATIC UNLOCKING OF ALL DOORS WHEN IGNITION IS TURNED OFF.

ONCE THE IGNITION IS TURNED OFF THE DOORS WILL AUTOMATICALLY UNLOCK.

13) DOOR LOCK / UNLOCK IN DRIVE

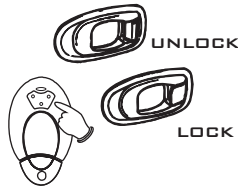

TO LOCK OR UNLOCK THE DOORS FROM THE REMOTE WHILE THE CAR IS RUNNING.

PRESS THE REMOTE BUTTON TO UNLOCK OR LOCK THE DOORS.

14) REMOTE PANIC



TO ENABLE THE SIREN TO SOUND AND THE INDICATORS TO FLASH UNDER EMERGENCY CONDITIONS.

PRESS THE REMOTE BUTTON CONTINUOUSLY FOR 3 SECONDS. ONCE IN PANIC, IT WILL AUTOMATICALLY UNLOCK THE DOORS (IF CONNECTED). YOU CAN DRIVE IN THIS MODE.

15) REMOTE PANIC IN DRIVE



TO ENABLE THE SIREN TO SOUND AND THE INDICATORS TO FLASH UNDER EMERGENCY CONDITIONS WHILE DRIVING.

ONCE IN DRIVE, PRESS THE REMOTE BUTTON CONTINUOUSLY FOR 3 SECONDS. THE SIREN WILL SOUND AND THE INDICATORS WILL FLASH.

16) RESETTING PANIC MODE



TO RESET THE UNIT BACK TO NORMAL OPERATION.

PRESS THE REMOTE BUTTON AGAIN, THE UNIT WILL RESET PANIC AND RETURN TO NORMAL OPERATION.

17) SETTING HI-JACK SERVICE MODE

*

 


TO TEMPORARILY DISABLE HI-JACK FOR VEHICLE SERVICE.

IN DRIVE, PRESS THE HIDDEN BUTTON FOR 5 SECONDS. THE SIREN WILL CHIRP ONCE, THE UNIT WILL ENTER SERVICE MODE.

18) OPERATION IN HI-JACK SERVICE MODE

*



IF YOU GO INTO HI-JACK, YOU WILL GET A CHIRP.

IF THE DRIVERS DOOR IS OPENED THEN CLOSED, YOU WILL HEAR A CHIRP, UNIT WILL NOT ENTER HI-JACK.

19) RESETTING HI-JACK SERVICE MODE

*



TO ENABLE NORMAL HI-JACK OPERATION.

IN DRIVE, PRESS THE HIDDEN BUTTON FOR 5 SECONDS, THE SIREN WILL SOUND TWO CHIRPS. THE UNIT WILL NOW BE IN NORMAL HI-JACK OPERATION.

20) ACTIVATING HI-JACK MODE

TO ACTIVATE ANTI HI-JACK.

IN DRIVE OPEN THEN CLOSE DRIVER'S DOOR. IF ALL DOORS, BONNET AND BOOT ARE CLOSED THE SENSOR / DASH LED WILL GIVE A 1 SECOND PULSE. THE UNIT IS NOW IN COUNTDOWN PHASE.

*



21) RESETTING THE HI-JACK DURING THE COUNT DOWN PHASE

TO RESET THE UNIT BACK TO NORMAL DRIVE MODE.

PRESS THE HIDDEN PUSH BUTTON AT ANY TIME UNTIL YOU HEAR 4 CHIRPS (+- 3 SECONDS), THE SYSTEM WILL EXIT HI-JACK MODE AND RESUME NORMAL OPERATION.

*



22) HI JACK FINAL PHASE

TO CONFIRM WHAT PHASE THE UNIT IS IN.

IN FINAL HI JACK THE SIREN WILL SOUND ON AND OFF AT 5 SECOND INTERVALS. THE VEHICLE WILL BE IMMOBILISED. THE UNIT CAN BE RESET BY PUSHING THE HIDDEN BUTTON UNTIL YOU HEAR 4 CHIRPS (+- 3 SECONDS).

*



23) HI JACK MODE INDICATION

TO CONFIRM THAT THE UNIT IS IN HI-JACK MODE.

TO CONFIRM THAT THE UNIT IS HI JACK MODE, TURN THE IGNITION OFF, PRESS THE REMOTE BUTTON, THE UNIT WILL SOUND FOUR CHIRPS.

*




24) SET / RESET CHIRPS

TO REMOVE THE SET AND RESET CHIRPS.

WHEN SETTING AND RESETTING THE ALARM THE CHIRPS WILL REMAIN SILENT. ALL OTHER CHIRPS WILL REMAIN OPERATIONAL.

*

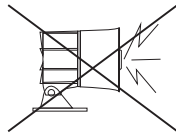

25) REMOTE BATTERY'S

BATTERY REPLACEMENT.

IN THE EVENT OF THE REMOTE LED NOT LIGHTING WHEN ACTIVATED, REPLACE THE BATTERY'S. REPLACEMENT BATTERY'S; 2 x CR1220



SANJI SECURITY SYSTEMS IS AN SABS ISO 9001 QUALITY MANUFACTURER. IF YOU ARE NOT ENTIRELY SATISFIED WITH THIS PRODUCT WE WOULD LIKE TO KNOW ABOUT IT.

CONTACT US ON: (011) 266 7500
SALES@SANJI.CO.ZA