

THE SANJI EWS IS A REVOLUTIONARY DETECTION SYSTEM THAT IS DESIGNED TO WARN AWAY THIEVES BEFORE THEY BREAK OR ENTER THE VEHICLE. THE EWS MODULE INCORPORATES THE MOST MODERN MICROWAVE SENSING AVAILABLE TODAY, TO ENSURE RELIABLE AND STABLE OPERATION. THE UNIQUE VOICE MODULE, WILL SOUND VERBAL INSTRUCTIONS AND WARNINGS TO THE WOULD BE THIEF. THE EWS IS MANUFACTURED TO FULL INTERNATIONAL ISO 9001 AND SABS QUALITY STANDARDS. PLEASE READ THESE INSTRUCTIONS FOR CORRECT SYSTEM OPERATION.

FOLLOW THE USER INTRUCTIONS BELOW FOR THE EWS-10

1) TO SET THE UNIT



EXISTING ALARM REMOTE CONTROL

TO ARM THE EWS-10 UNIT.

PRESS THE SET BUTTON ON YOUR EXISTING ALARM UNIT. THE EWS-10 WILL THEN SET.

2) SET DELAY PERIOD




EWS-10 ARMED DELAY PERIOD.

ON SETTING THE UNIT, THERE IS A 10 SECOND DELAY PERIOD. WHEN THE UNIT IS FULLY ARMED, IT WILL SOUND "PERIMETER ENGAGED".



' PERIMETER ENGAGED '

3) DUAL ZONE ADJUST

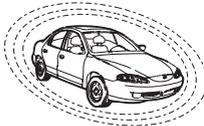

TO TEMPORARILY DESENSITISE THE SENSOR.

SET YOUR EXISTING ALARM. THEN WITHIN 5 SECONDS, MOVE NEAR THE VEHICLE UNTIL YOU HEAR THE UNIT SOUND "LOW SENSOR ENGAGED". THE EWS-10 WILL NOW REDUCE IT'S SENSITIVITY, THE EWS-10 WILL SOUND ;



' LOW SENSOR ENGAGED '

4) SENSOR SHUT DOWN



TO TEMPORARILY DISABLE THE SENSOR.

BEFORE EXITING THE VEHICLE, SWITCH THE IGNITION ON THEN OFF QUICKLY, THE INDICATORS WILL FLASH ONCE. AFTER THE FLASH THEN SET THE ALARM THE EWS-10 WILL SOUND "SENSOR OVERRIDE ENGAGED".



' SENSOR OVERRIDE ENGAGED '

5) OPERATION WHEN FULLY ARMED



FIRST MOVEMENTS NEAR VEHICLE.

ANY MOVEMENT NEAR THE VEHICLE WILL CAUSE THE EWS-10 TO SOUND 2 SOFT CHIRPS FOLLOWED BY A SOFT VERBAL "WARNING WARNING". THEN THE EWS-10 WILL FLASH THE INDICATORS TO ATTRACT ATTENTION.




' WARNING WARNING '

6) **LOUD WARNINGS**

CONTINUOUS MOVEMENTS AROUND THE VEHICLE.

IF THE UNIT PICKS UP FURTHER MOVEMENT WITHIN 15 SECONDS AFTER THE SOFT "WARNING WARNING". THE EWS WILL SOUND AS POINT 5 EXCEPT THE CHIRPS AND WARNINGS WILL BE LOUDER, THEN THE EWS WILL FLASH THE INDICATORS TO ATTRACT ATTENTION.

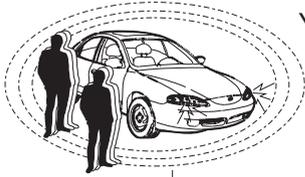

'WARNING WARNING'

7) **LOUD WARNINGS CONTINUED**

CONTINUOUS MOVEMENTS AROUND THE VEHICLE.

IF THE UNIT PICKS UP FURTHER MOVEMENT WITHIN 15 SECONDS OF THE LOUD "WARNING WARNING" POINT 6 THE EWS-10 WILL SOUND LOUD "PERIMETER VIOLATION", THEN THE EWS-10 WILL FLASH THE INDICATORS TO ATTRACT ATTENTION.



'PERIMETER VIOLATION'

8) **ALARM SOUNDING**

AFTER 3 LOUD "PERIMETER VIOLATION" WARNINGS.

IF THE EWS-10 DETECTS CONTINUOUS MOVEMENT WITHIN A 15 SECOND PERIOD IT WILL SOUND THE SIREN AFTER THE 3 LOUD "PERIMETER VIOLATION" WARNINGS. THE SIREN WILL SOUND FOR 25 SECONDS AND THEN RE ARM TO LOUD WARNING POINT 7 AND THE EWS-10 WILL AUTOMATICALLY DESENSITISE THE ZONE.



'PERIMETER VIOLATION'



'PERIMETER VIOLATION'



'PERIMETER VIOLATION'



ALARM SOUNDING

9) **RESETTING THE UNIT**

TO RESET THE UNIT.

WHEN YOU RESET YOUR ALARM THE EWS-10 WILL RESET. YOU CAN ALSO RESET THE EWS BY TURNING THE IGNITION ON AND THEN OFF DURING THE ALARM DELAY PERIOD POINT 2.



EXISTING ALARM REMOTE CONTROL



10) **ALARM TRIP NOTIFICATION**

TO NOTIFY DRIVER THAT THE ALARM HAS TRIPPED.

AFTER RESETTING YOUR ALARM THE EWS-10 WILL SOUND "SPACE VIOLATION" IF THE ALARM SOUNDED.



'SPACE VIOLATION'

1) SETTING THE UNIT



TO ARM THE UNIT.



DASH LED FLASHING RAPIDLY


PRESS THE RIGHT BUTTON OF THE REMOTE, THE UNIT WILL CHIRP AND FLASH THE INDICATORS TWICE. THE DASH LED WILL FLASH RAPIDLY. IF FITTED WITH CENTRAL LOCKING THE DOORS WILL LOCK.

2) DUAL ZONE ADJUST.



WITHIN 5 SECONDS

TO DESENSITISE THE SENSOR.

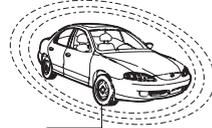

‘ LOW SENSOR ENGAGED ’


WITHIN 5 SECONDS OF SETTING THE ALARM, PRESS THE RIGHT BUTTON AGAIN. THE UNIT WILL SOUND “LOW SENSOR ENGAGED”. THE EWS-20 WILL NOW REDUCE IT’S SENSITIVITY.

3) SENSOR SHUT DOWN



WITHIN 5 SECONDS

TO TEMPORARILY DISABLE THE SENSOR.

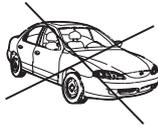

‘ SENSOR OVERRIDE ENGAGED ’

AFTER POINT 2 MESSAGE “LOW SENSOR ENGAGED” PRESS THE RIGHT BUTTON AGAIN, THE EWS-20 WILL SOUND THE MESSAGE “SENSOR OVERRIDE ENGAGED” THE SENSOR WILL REVERT TO NORMAL OPERATION ONCE THE UNIT IS RESET ON THE LEFT BUTTON.

4) FULLY ARMED



THE UNIT IS FULLY ARMED.



DASH LED FLASHING SLOWLY



‘ PERIMETER ENGAGED ’

WHEN THE UNIT IS FULLY ARMED (30 SEC DELAY), THE UNIT WILL SOUND “PERIMETER ENGAGED”

5) ALARM SET CONFIRMATION.



TO VERIFY THE UNIT IS ARMED.



TO CONFIRM THAT THE UNIT IS ARMED. PRESS THE RIGHT BUTTON, THE INDICATORS WILL FLASH ONCE.

6) LOCK ON START.



IGNITION TURNED ON

LOCKING WHEN STARTING THE VEHICLE.



LOCK

WHEN THE VEHICLE IS STARTED, THE DOORS WILL LOCK, IF CONNECTED TO THE VEHICLES CENTRAL LOCKING.

7) UNLOCK AND LOCK IN DRIVE.




UNLOCK



LOCK

LOCKING AND UNLOCKING.

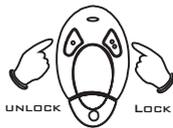


UNLOCK

LOCK

IN DRIVE, PRESS THE LEFT BUTTON TO UNLOCK THE DOORS AND THE RIGHT BUTTON TO LOCK THE DOORS.

8) OPERATION WHEN FULLY ARMED

FIRST MOVEMENTS NEAR VEHICLE.

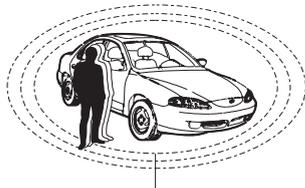

‘ WARNING WARNING ’

ANY MOVEMENT NEAR THE VEHICLE WILL CAUSE THE EWS-20 TO SOUND 2 SOFT CHIRPS FOLLOWED BY A SOFT VERBAL “WARNING WARNING”, THEN THE EWS-20 WILL FLASH THE INDICATORS TO ATTRACT ATTENTION. IF A DOOR IS OPENED THE EWS-20 WILL SOUND THE ALARM IMMEDIATELY.

9) LOUD WARNINGS

CONTINUOUS MOVEMENTS AROUND THE VEHICLE.

IF THE UNIT PICKS UP FURTHER MOVEMENT WITHIN 15 SECONDS AFTER THE SOFT "WARNING WARNING". THE EWS-20 WILL SOUND AS POINT 8 EXCEPT THE CHIRPS AND WARNINGS WILL BE LOUDER, THEN THE EWS WILL FLASH THE INDICATORS TO ATTRACT ATTENTION.



' WARNING WARNING '

10) LOUD WARNINGS CONTINUED

CONTINUOUS MOVEMENTS AROUND THE VEHICLE.

IF THE UNIT PICKS UP FURTHER MOVEMENT WITHIN 15 SECONDS OF THE LOUD "WARNING WARNING" POINT 9 THE EWS-20 WILL SOUND LOUD "PERIMETER VIOLATION", THEN THE EWS-20 WILL FLASH THE INDICATORS TO ATTRACT ATTENTION.



' PERIMETER VIOLATION '

11) ALARM SOUNDING

AFTER 3 LOUD WARNINGS.

IF THE EWS-20 DETECTS CONTINUOUS MOVEMENT WITHIN A 15 SECOND PERIOD IT WILL SOUND THE SIREN AFTER THE 3 LOUD "PERIMETER VIOLATION" WARNINGS. THE SIREN WILL SOUND FOR 25 SECONDS AND THEN RE ARM TO LOUD WARNING POINT 10 AND THE EWS-20 WILL AUTOMATICALLY DESENSITISE THE ZONE.



' PERIMETER VIOLATION '



' PERIMETER VIOLATION '



' PERIMETER VIOLATION '



ALARM SOUNDING

12) RESETTING THE UNIT

TO RESET THE UNIT.

PRESS THE LEFT BUTTON ON OUR REMOTE CONTROL, THE UNIT WILL FLASH AND CHIRP ONCE. THE EWS-20 IS NOW RESET. THE DASH LED WILL TURN OFF.



13) ALARM TRIP NOTIFICATION

TO NOTIFY DRIVER THAT ALARM HAS TRIPPED.

AFTER RESETTING YOUR ALARM THE EWS-20 WILL SOUND "SPACE VIOLATION" IF THE ALARM SOUNDED.



' SPACE VIOLATION '