

THE XT300 IS A NEW GENERATION ALARM AND IMMOBILISER COMFORT CONTROL SYSTEM. SANJI HAVE INCORPORATED THE MOST UP TO DATE TECHNOLOGY TO IMPROVE PERFORMANCE AND LONG TERM RELIABILITY. READ THESE INSTRUCTIONS FOR CORRECT SYSTEM OPERATION. ALL POINTS MARKED \* ARE OPTIONAL FEATURES. CONSULT YOUR DEALER.

1) SETTING THE ALARM

TO ENABLE FULL ALARM FEATURES.


PRESS THE REMOTE BUTTON, THE UNIT WILL SOUND 2 SOFT CHIRPS AND THE INDICATORS WILL FLASH TWICE. IF FITTED WITH CENTRAL LOCKING THE DOORS WILL LOCK.



2) DOOR / BOOT OPEN WARNING

TO WARN THE DRIVER IF A DOOR OR BOOT IS OPEN WHEN SETTING THE ALARM.


THE UNIT WILL SOUND TWO ADDITIONAL LOUD CHIRPS WHEN SETTING THE ALARM.

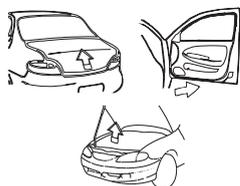

3) ALARM DELAY PERIOD

30 SECOND ARMING DELAY PERIOD.


THE DASH LED WILL FLASH RAPIDLY DURING THE 30 SECOND DELAY PERIOD. AFTER THE DELAY THE DASH LED WILL FLASH SLOWLY. NOW THE ALARM IS FULLY SET.

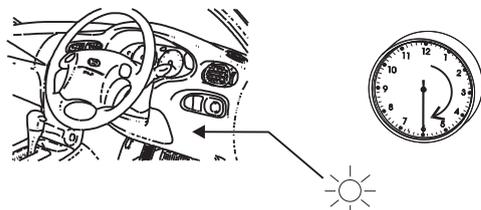

4) ALARM FULLY SET

CONFIRMATION OF ALARM FULLY SET.

THE DASH LED WILL FLASH SLOWLY. THE ALARM IS FULLY SET AND WILL SOUND FOR 30 SECONDS IF A ZONE IS TRIGGERED (A DOOR, BOOT OR SENSOR).

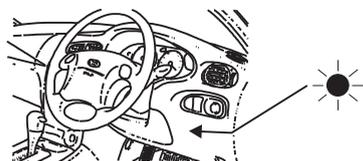

5) AUTO ZONE BYPASS

TO AUTOMATICALLY BYPASS A DEFECTIVE ZONE.

IF THE UNIT DETECTS A PERMANENTLY FAULTY ZONE IT WILL SOUND 3 TIMES THEN ISOLATE THE FAULTY ZONE.




**8) RESETTING THE ALARM**



TO RESET FULL ALARM FEATURES.

PRESS THE REMOTE BUTTON AND THE UNIT WILL SOUND 1 SOFT CHIRP AND THE INDICATORS WILL FLASH ONCE. IF FITTED WITH CENTRAL LOCKING THE DOORS WILL UNLOCK.

**9) VIOLATION CHIRPS**

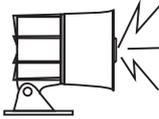

TO INDICATE TO USER THAT THE ALARM HAS TRIGGERED IN HIS/HER ABSENCE.

ON ALARM RESET THE UNIT WILL SOUND 4 LOUD CHIRPS IF THERE WAS A ZONE TRIGGER DURING ALARM FULLY SET.



**10) OVERRIDING THE ALARM**



TO RESET THE ALARM IN THE EVENT OF A FLAT REMOTE BATTERY.

IN ALARM SET MODE, OPEN THE DOOR, SIREN WILL SOUND. PRESS THE HIDDEN OVERRIDE BUTTON UNTIL THE UNIT CHIRPS, THE SYSTEM WILL THEN RESET.

**11) DOOR LOCK ON START**



AUTOMATIC LOCKING OF ALL DOORS WHEN IGNITION TURNED ON, IF FITTED WITH CENTRAL LOCKING.

ONCE THE IGNITION IS TURNED AND ALL THE DOORS ARE CLOSED, THE DOORS WILL AUTOMATICALLY LOCK AFTER A 2 SECOND DELAY PERIOD.


**12) REMOTE PANIC**



TO ENABLE THE SIREN TO SOUND AND THE INDICATORS TO FLASH UNDER EMERGENCY CONDITIONS.

PRESS THE REMOTE BUTTON CONTINUOUSLY FOR 3 SECONDS. ONCE IN PANIC, IT WILL AUTOMATICALLY UNLOCK THE DOORS (IF CONNECTED). YOU CAN DRIVE IN THIS MODE.

**13) REMOTE PANIC IN DRIVE**

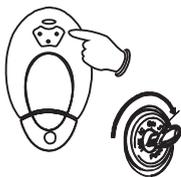

TO ENABLE THE SIREN TO SOUND AND THE INDICATORS TO FLASH UNDER EMERGENCY CONDITIONS WHILE DRIVING.

ONCE IN DRIVE, PRESS THE REMOTE BUTTON CONTINUOUSLY FOR 3 SECONDS. THE SIREN WILL SOUND AND THE INDICATORS WILL FLASH.

**14) RESETTING PANIC MODE**




TO RESET THE UNIT BACK TO NORMAL OPERATION.

PRESS THE REMOTE BUTTON AGAIN, THE UNIT WILL RESET PANIC AND RETURN TO NORMAL OPERATION.

15) SETTING SERVICE MODE

TO TEMPORARILY DISABLE THE FULL SYSTEM FOR A VEHICLE SERVICE.

IN DRIVE, PRESS THE HIDDEN BUTTON FOR 10 SECONDS. THE SIREN WILL CHIRP ONCE, THE UNIT WILL ENTER SERVICE MODE. THE DASH LED WILL BE ON SOLID. IF YOU PRESS THE REMOTE, THE UNIT WILL CHIRP 8 TIMES TO CONFIRM SERVICE MODE.

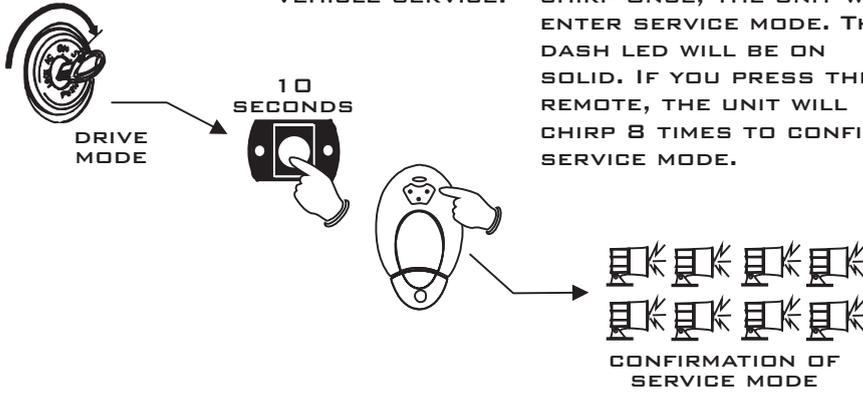

PLEASE NOTE

WHEN THE XT3000 UNIT IS IN SERVICE MODE, NO ALARM, IMMOBILISER AND HI-JACK (OPTIONAL) FUNCTIONS WILL BE OPERATIONAL. THE XT3000 WILL OPERATE AS IF THERE IS NO SYSTEM PRESENT IN THE VEHICLE.

16) RESETTING SERVICE MODE

TO ENABLE NORMAL ALARM OPERATION.


IN DRIVE, PRESS THE HIDDEN BUTTON FOR 5 SECONDS, THE SIREN WILL CHIRP ONCE. THE UNIT WILL NOW BE BACK TO NORMAL ALARM OPERATION.



18) ACTIVATING HI JACK MODE

TO ACTIVATE HI-JACK.

IN DRIVE OPEN THEN CLOSE DRIVERS DOOR. IF ALL DOORS ,BONNET AND BOOT ARE CLOSED THE DASH LED WILL GIVE A 1 SECOND FLASH. THE UNIT IS NOW IN THE HI-JACK COUNTDOWN PHASE.

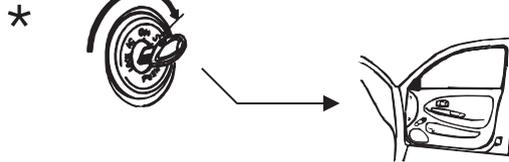

19) FORCED HI JACK OPTION

TO ACTIVATE FORCED HI-JACK.

WHEN YOU GO INTO DRIVE, THE UNIT WILL AUTOMATICALLY ENTER HI-JACK, THE DASH LED WILL GIVE A 1 SECOND FLASH. THE UNIT IS NOW IN THE HI-JACK COUNTDOWN PHASE.



20) RESETTING THE HI JACK DURING THE COUNT DOWN PHASE

TO RESET THE UNIT BACK TO NORMAL DRIVE MODE.

PRESS THE HIDDEN PUSH BUTTON AT ANY TIME UNTIL THE UNIT CHIRPS ONCE. THE SYSTEM WILL EXIT HI-JACK MODE AND RESUME BACK TO NORMAL OPERATION.



**21) HI-JACK  
MODE  
INDICATION**

\*



TO CONFIRM THAT THE UNIT IS IN HI-JACK MODE.

TO CONFIRM THAT THE UNIT IS IN HI-JACK MODE, TURN THE IGNITION OFF, PRESS THE REMOTE BUTTON, THE UNIT WILL SOUND 4 CHIRPS.



**22) HI-JACK  
WARNING  
PHASE**

\*



WHEN THE UNIT ENTERS THE WARNING PHASE.

THE INDICATORS WILL FLASH AND THE SIREN WILL SOUND FOR 12 SECONDS. IF THE IGNITION IS TURNED OFF, THE UNIT WILL ENTER THE FINAL HI-JACK PHASE.

**23) HI-JACK  
SLOWDOWN  
PHASE**

\*



THE SLOWDOWN PERIOD DURING HI-JACK.

AFTER THE 12 SECOND WARNING PERIOD, THE UNIT WILL ENTER THE SLOWDOWN PHASE FOR 10 SECONDS BEFORE GOING INTO THE FINAL HI-JACK PHASE AND IMMOBILISING THE VEHICLE. IF THE IGNITION IS TURNED OFF, THE UNIT WILL ENTER THE FINAL HI-JACK PHASE.

**24) HI-JACK  
FINAL  
PHASE**

\*



IN THE FINAL HI-JACK PHASE.

IN FINAL HI-JACK THE SIREN WILL SOUND AND THE INDICATORS WILL FLASH ON AND OFF, AT 5 SECOND INTERVALS. THE VEHICLE WILL BE IMMOBILISED. THE UNIT CAN BE RESET BY PUSHING THE HIDDEN BUTTON UNTIL YOU GET A CHIRP.

**25) REMOTE  
BATTERIES**



BATTERY REPLACEMENT.

IN THE EVENT OF THE REMOTE LED NOT LIGHTING WHEN ACTIVATED, REPLACE THE BATTERIES. REPLACEMENT BATTERIES, 2 x CR1220.